4 WATCH A RECORDED PROGRAM

* You can use the available buttons on the remote control or on the VCR.

1. Load a cassette with the label facing out and the window facing up.
2. Press **REW** or **FF** (remote) to find program start point.
3. Press **PLAY** to start playback.
4. Press **STOP** (remote) or **STOP/EJECT** (VCR), then press **STOP/EJECT** to remove the cassette.

5 RECORD A PROGRAM

a–BASIC RECORDING

* You can use the available buttons on the remote control or on the VCR.

1. Load a cassette as above.
2. Press **CH**, or press the appropriate **NUMBER** keys (remote) and press **ENTER** (remote), to select the recording channel.
3. Press **SP/EP** (remote) to set the recording speed.
4. Press **REC** and **PLAY** together (remote) or **REC** (VCR) to start recording.
5. Press **PAUSE** to stop recording temporarily, and press **PLAY** to resume.
6. Press **STOP** or **STOP/EJECT**, then press **STOP/EJECT** to remove the cassette.

b–INSTANT TIMER RECORDING

* You cannot perform ITR using the remote control.

1. Press **REC** to start recording.
2. Press **REC** to engage ITR. “0:30” appears in the VCR display.
3. To extend duration in increments of 30 minutes, press **REC** as many times as necessary.

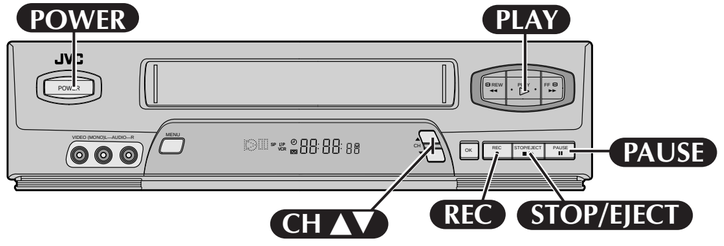

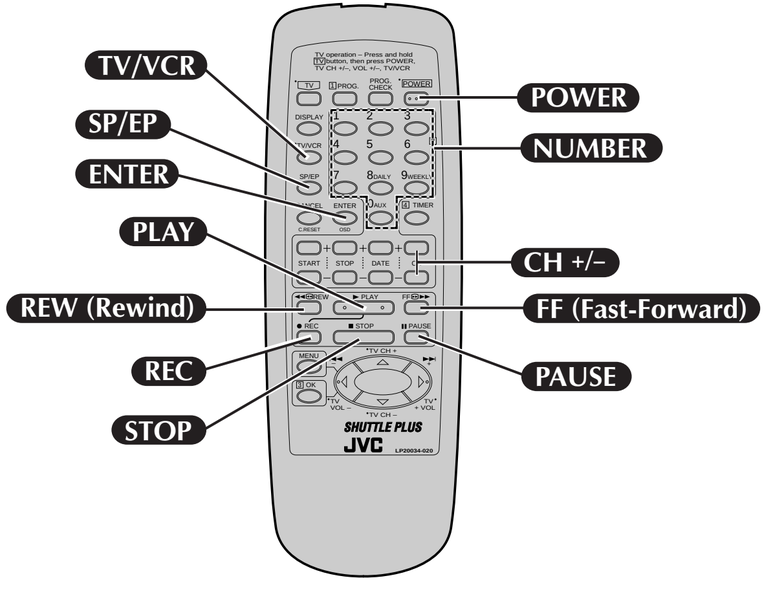

Dear Customer,
Thank you for purchasing this JVC Video Cassette Recorder.

QUICK START*

A GUIDE TO EASY SET UP AND USE

JVC

MONO/Hi-Fi/SUPER VHS
VIDEO CASSETTE RECORDERS

**** Please refer to the HR-A51U's instruction manual for more detailed information.***

The Path To Enjoyment Starts Here . . .

1 CHECK PACKAGE CONTENTS

2 SITUATE AND CONNECT VCR

3 SET CLOCK AND TUNER

4 PLAY BACK A TAPE

5 RECORD A PROGRAM

1 MAKE SURE THAT YOUR PACKAGE CONTAINS:

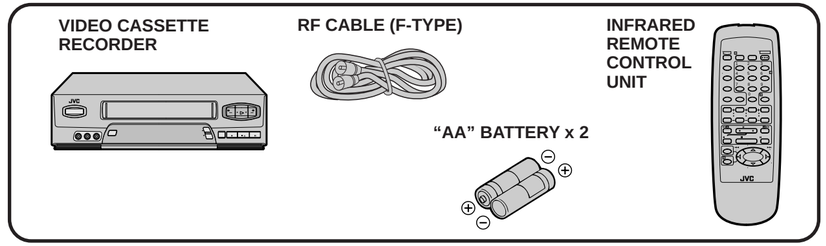

Printed in Malaysia
0599 IYV*MW*PJ

COPYRIGHT © 1999 VICTOR COMPANY OF JAPAN, LTD.

2 SITUATE AND CONNECT YOUR NEW VCR

a–BASIC ANTENNA/CABLE CONNECTION

① Place the VCR on a stable, horizontal surface.
② Disconnect your antenna or cable line from your TV.
③ Connect your antenna to your VCR.
④ Connect your VCR to your TV.

⑤ After completing the basic connections:
- If you're using a Cable Box, . . .
  . . . go to **2b** (CATV CONVERTER CONNECTION) .
- If you're using an AV connection, . . .
  . . . go to **2c** (AUDIO/VIDEO CONNECTIONS).
- If you're using an RF connection, . . .
  . . . go directly to **3** (PLUG & PLAY).

RF CONNECTION

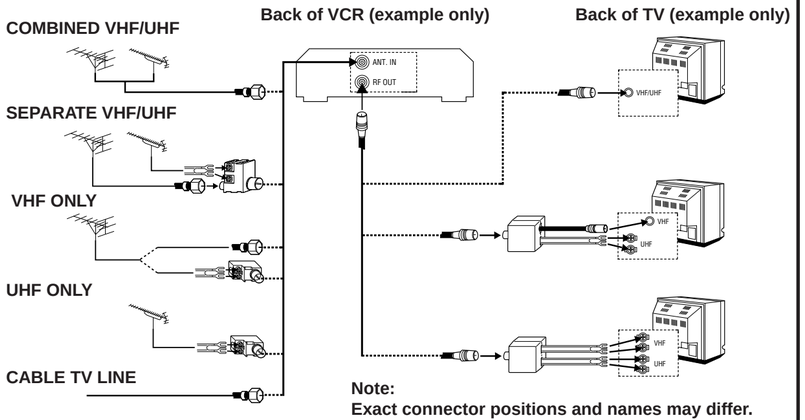

Note:
Exact connector positions and names may differ.

● CONNECTORS WHICH ARE OR MAY BE REQUIRED:

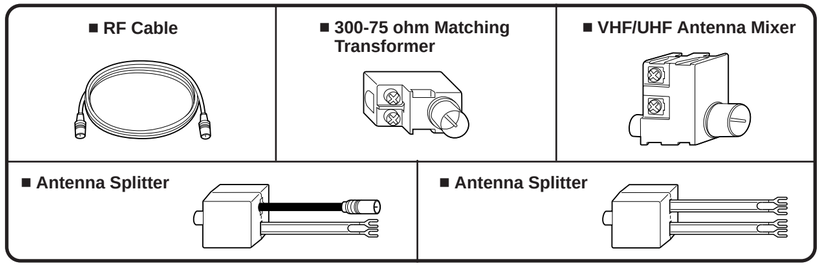

b–CATV CONVERTER CONNECTION

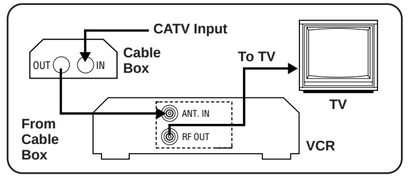

With this connection you can view/record any cable channel <u>including scrambled channels to which you have subscribed</u>.

To watch TV with this type of connection

① Press **TV/VCR** on remote to engage VIDEO mode.
② Tune TV to VCR output channel (3, 4 or AV mode).
③ Tune VCR to Cable Box output channel.
④ Select desired channel on Cable Box.
- You can only view the channel you're recording.
- You cannot change channels with the VCR remote control.

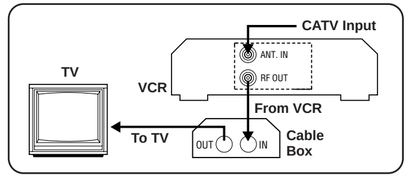

With this connection, you can view one scrambled cable channel <u>while recording another unscrambled channel</u>.

To watch TV with this type of connection

① Press **CH** or **NUMBER** keys to select desired channel for recording.
② Press **TV/VCR** to engage TV mode.
③ Tune TV to Cable Box output channel.
④ Select desired channel on Cable Box.
- You cannot record scrambled channels.
- To play back a tape, you must tune the Cable Box to the VCR output channel.

c–AUDIO/VIDEO CONNECTIONS

AV connection methods differ from one type of VCR to another. <u>First, for any TV and VCR type, connect your VCR to your TV using RF connection</u>. Then make AV connections following one of the methods pictured to the right.
*After making the connections, go to **3** (PLUG & PLAY).*

Hi-Fi VHS VCR ⇻ AV STEREO TV



MONAURAL VHS VCR ⇻ AV TV



SUPER VHS VCR ⇻ AV STEREO TV WITH S-VIDEO INPUT TERMINALS

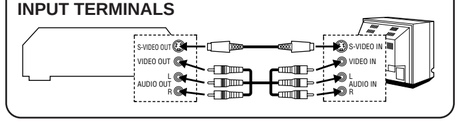

To Listen To VCR Sound Through A Component Stereo Audio System, Connect As Shown

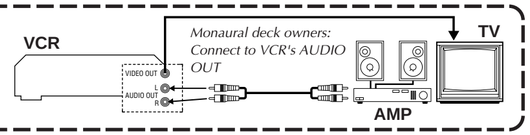

3 SET YOUR VCR'S CLOCK AND TUNER

PLUG & PLAY

The VCR's clock and tuner channels are set automatically when the VCR is plugged into the AC outlet.
If you use a cable box, Plug & Play will not function; set the clock and tuner channels manually. (☞ pg.11 – 15 of the HR-A51U's instruction manual)

1

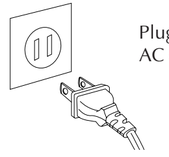

Plug the VCR into the AC outlet.

2

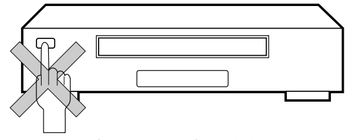

Don't press any buttons on the VCR or remote during auto setup.

3

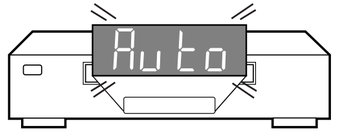

"AUTO" blinks while the VCR automatically sets the clock using information provided by the local PBS channel.

4

During auto channel setting, the channel numbers are displayed as they are scanned and set. Receivable channels are automatically assigned to CH buttons, and non-receivable channels are skipped.

5



When setting is complete, the VCR displays the current time. You can now use your VCR.

NOTES:
- If the time displayed in **5** is incorrect, perform the Semi-Auto or Manual Clock Set procedure (refer to page 12 or 13 of the HR-A51U's instruction manual). Auto channel set has already taken place, and is not affected.
- There are some PBS channels that do not transmit clock setting data. If your antenna cable is properly connected and "– – : – –" is displayed, perform the Manual Clock Set procedure (refer to page 13 of the HR-A51U's instruction manual). Auto channel setting has not yet taken place, so please also perform the "Set Receivable Channels" procedure (refer to page 14 of the HR-A51U's instruction manual).